

# CORBY

## MIRROR

These instructions are for your safety. Please read through them thoroughly before installation and retain for future reference. Failure to follow them could cause injury and/or property damage.

These instructions apply to wall mounted and free standing mirrors, illuminated and non-illuminated. Styles may vary.

\*Applies to illuminated mirrors ONLY

### UNPACKING

Carefully unpack the product and arrange the parts as shown below. Make sure the unit is located on a firm, flat surface before use.


### PARTS SUPPLIED

- 1x Mirror
- 1x Fixings pack for wall mounted mirror only (2 x wall plugs, 2 x screws)
- 4 x AAA (1.5V) batteries\*


### IDENTIFICATION

(Image for illustrative purposes only)

#### Free standing:

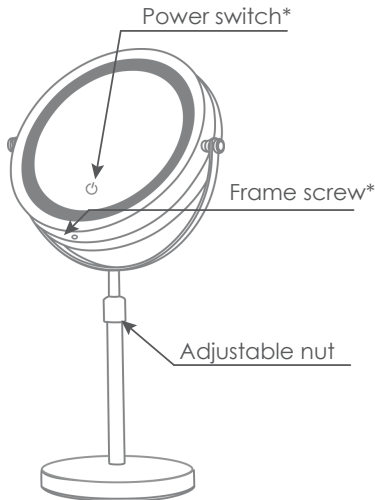

#### Wall mounted:

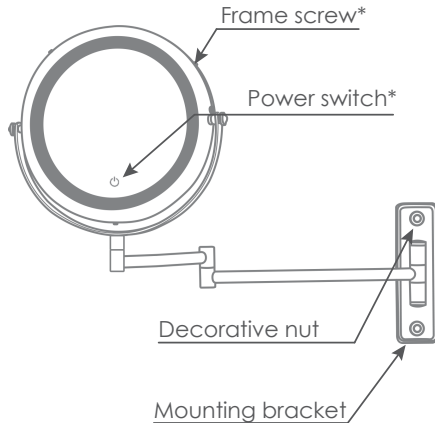

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have had supervision or instruction concerning use of the appliance by a person responsible for their safety.

**WARNING: Make sure the mirror is NOT positioned where it can reflect sunlight. Reflected sun light can cause fire.**

## INSTALLATION (Wall mounted mirrors only)

- Remove the decorative nuts from mounting screws on the bracket.
- **Check the wall does not have any wiring or pipe work behind where you intend to drill.**
- Using a spirit level, line up the mounting bracket to the desired position and mark the wall (with a pencil) where the holes of the bracket are.
- Using an electric drill, drill holes in the wall at the marked positions.
- Push the wall plugs in to the holes and line up the mounting bracket.
- Place the decorative cover of the mirror over the mounting bracket so that the mounting screws pass through the holes of the decorative cover, then tighten.

## USE & BATTERY REPLACEMENT\*

- Remove the 3 x frame screws.
- Carefully open the mirror to reveal the black battery compartment.
- Insert 4 x **AAA (1.5V)** batteries in to the battery compartment.
- Reassemble the mirror.
- Press the power switch on the mirror face to turn the light on and off.

**NOTE: The switch is on a timer and will switch off after 4 minutes (+-1minute)**

## ADJUSTING THE HEIGHT (Free standing mirrors only)

- Turn the adjustable nut anti-clockwise.
- Set the height.
- Turn the adjustable nut clockwise to secure.

## CARE

- Before cleaning, ensure the product is switched off.
- Do not use excessive amounts of water when cleaning the mirror.
- Do not immerse the product in water or any other liquid.
- Clean with soft, moist cloth and any glass cleaner or soap & water. Do not use abrasive cleaner.

## BATTERY CAUTION\*

- This product is not suitable for use with rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Only use a battery of the same or equivalent type to that recommended.
- Take special care to ensure the batteries are inserted correctly, observing polarity.
- Avoid short circuiting the contacts of the battery terminals.
- Remove the battery when it has expired or if the mirror is to be stored for long periods.
- Remove the batteries if the product is to be scrapped.
- Do not attempt to power this product by using a separate power supply.
- Dispose of exhausted batteries safely and **never dispose of batteries in a fire.**

**\*Applies to illuminated mirrors ONLY**

## ENVIRONMENTAL PROTECTION\*

- (WEEE) Waste Electrical and Electronic Equipment

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



## GUARANTEE

For your convenience, you are not required to complete a form and return it to us in order to validate your guarantee. However, please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document. **We recommend that you attach your receipt to this documentation.**

Your product carries a 12 month guarantee from the date of original purchase (or as otherwise stated at point of purchase) If your product fails to operate to its specification due to faulty workmanship or materials during the guarantee period, we will either repair or replace the product. We will use our discretion to determine whether to offer a repair or provide a replacement. The product will not be covered by the guarantee if it has been misused, transformed, modified or altered in any way.

If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof of purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed. For full details of your product you should refer to the instruction manual which accompanies the product. You are strongly advised to read this manual carefully in its entirety and to retain it for future reference.

This product guarantee does not affect your statutory rights.



[www.firedupcorporation.com](http://www.firedupcorporation.com)

Fired Up Corporation Ltd.  
Fired Up Buildings  
St Thomas Road  
Huddersfield  
HD1 3LF  
United Kingdom

---