

CORBY

2200W HAIR DRYER

www.corbyofwindsor.com

These instructions must be read before use

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage. These instructions are also available on our website.

CONTENTS

SECTION 01

Important safety instructions	03-04
Important	05

SECTION 02

Introduction	07
Unpacking	07
Identification	07
Parts supplied	07

SECTION 03

Use	08-09
Care	09
Specification	10
Contacts	12

IMPORTANT SAFETY INSTRUCTIONS

CAUTIONS

DO'S

- Ensure your mains supply rating corresponds with that stated on the rating label fixed to the appliance before making any connections.

- Check the product and the supply cord for damage regularly.

- Check if the voltage indicated on the appliance corresponds to the local voltage before you connect the appliance.

- Only use this appliance for its intended use as described in this manual.

- Always disconnect the appliance from the electrical supply after use and before carrying out cleaning or maintenance.

- Store the product out of reach from children.

- Always switch the appliance off before putting it down, even if it is only for moment.

- Always allow attachments to cool before handling.

- Clean the appliance after use to avoid the accumulation of grease and other residues.

DON'TS

- Never use the product near any source of water such as wash basins, baths, sinks etc. 

- Never use the product outdoors.

- Never cover the air intake grille when in use.

- Never allow the supply cord to touch hot surfaces.

- Never use the appliance with wet hands and keep away from sources of water.

- Never use the product if the supply cord or plug is damaged or if the appliance has been damaged in any manner.

- Never leave the hair dryer unattended when plugged in.

- Do not use the hair dryer for any purpose other than drying and styling human hair.

- Do not twist or wrap the supply cord around the hair dryer, even during storage.

- Do not direct the airflow towards the eyes or other sensitive areas.

IMPORTANT!

For EU market market ONLY:

(This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.)

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

Children being supervised not to play with the appliance.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Check the appliance and the supply cord for damage regularly. If the supply cord becomes damaged, it must be replaced by a suitably qualified person using the same rated cable. Do not attempt to make repairs to the appliance yourself, always contact a qualified technician.

The hair dryer is fitted with an automatic overheating protection device. In the event of the unit overheating the hair dryer will switch off. Unplug the unit from the mains and allow to cool. The hair dryer can be used again once cooled, but first check the air intake grilles to make sure they are not obstructed by fluff, hair, etc.

In keeping with other manufacturer's of domestic appliances, we recommend that when not in use the product should be switched off at the mains supply only.

When the hair dryer is used in the bathroom, unplug it after use as the proximity of the water presents a hazard even when the hair dryer is switched off.

For additional protection, the installation of a residual current device (RCD) having a residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advise.

INTRODUCTION

Thank you for choosing this hair dryer. This product is designed to meet the most stringent quality, performance, and safety requirements. This guide aims to improve your understanding of your new hair dryer by providing simple and informative instructions.


UNPACKING

Carefully unpack the product using the following procedure:

- Carefully lift the parts/product out of the box
- Carefully remove the protective wrapping from the parts

IDENTIFICATION

(Image for illustrative purposes only)

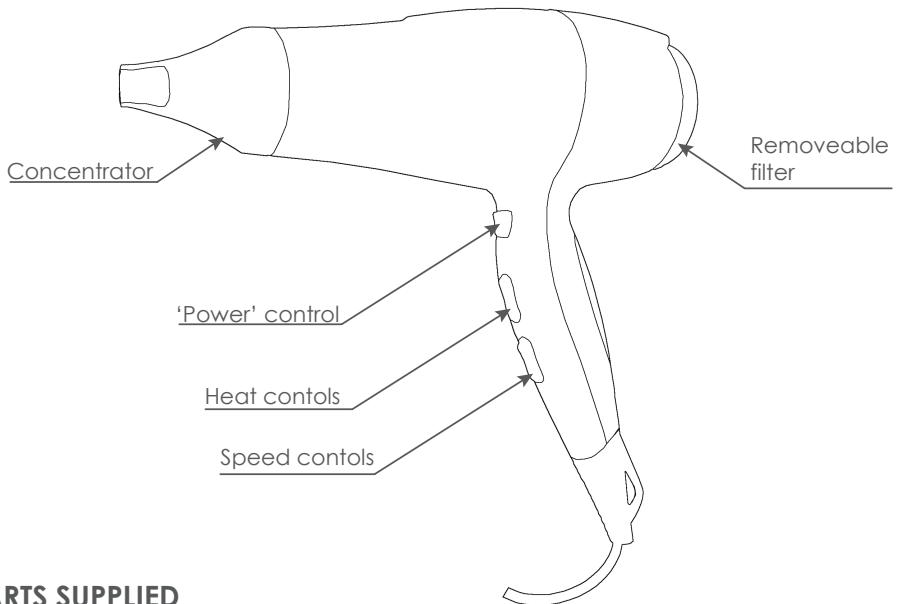

PARTS SUPPLIED


- 1x 2200W hair dryer
- 1x Concentrator attachment

USE

SETTINGS

The air flow and temperature can be adjusted using the switches located on the handle of the hair dryer.

Speed Setting	Heat Setting
0 Off	⌋ Low Heat
↺ Low Speed	⌋⌋ Medium Heat
↻ High Speed	⌋⌋⌋ High Heat

- (1) Press and hold the  button to turn on
- (2) Use speed setting 2 and heat setting 3 for fast drying or pre-drying
- (3) Use speed setting 1 and heat setting 1 or 2 for gentle drying and styling

IMPORTANT

If the appliance overheats, it will switch off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not obstructed by fluff, hair, etc. The filter can be removed to check. See page 8.

DRYING

1. Put the plug in the wall socket
2. Switch the appliance on by selecting the desired setting
3. Dry your hair by making brushing movements while holding the dryer at a short distance from your hair.

ATTACHMENTS

Concentrator - the concentrator attachment enables the directing of airflow to a more specific area of hair. Connect the concentrator by simply clicking it onto the appliance. Disconnect it by pulling it off.

Do not use attachments not recommended by the manufacturer.

CARE

When cleaning, or storing away, always pull out the plug from the socket outlet. Never yank the cord to disconnect from the outlet, instead grasp the plug and pull to disconnect.

This appliance should be cleaned with a dry cloth. Remove the concentrator from the hair dryer before cleaning. Never rinse the appliance with water.


STORAGE

Allow the hair dryer to cool after use and store in a dry location. The hair dryer may be hung from the loop located on the handle. Never wrap the power cord around the hair dryer.

PLUG REPLACEMENT (for product fitted with BS plug)

This appliance is supplied with a BS1363 3 pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at **13 Amp** and approved to BS1362 by ASTA.

In the event the mains plug has to be removed/replaced for any reason, please note: The wires in the mains lead on this appliance are coloured in accordance with the following code:

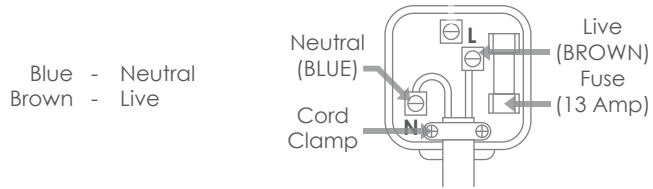

Note: The hair dryer is double insulated and does not require an Earth (ground) connection.

Since the colours may not correspond with the markings identifying the terminals in your plug proceed as follows:

- The blue wire must be connected to the terminal marked N
- The brown wire must be connected to the terminal marked L

Important - any cut off plug should be disposed of safely to prevent hazard. There is a danger of electric shock if a cut off plug is inserted into a socket outlet.

SPECIFICATION

Model Type	-	CH-603
Rated Voltage	-	220V - 240V
Rated Frequency	-	50/60Hz
Rated Power	-	2000W - 2200W

CONFORMITY WITH DIRECTIVES

Conforms with relevant European Directives

ENVIRONMENTAL PROTECTION

- (WEEE) Waste Electrical and Electronic Equipment

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

- This appliance complies with the RoHS directive which restricts the use of certain hazardous substances in electrical and electronic equipment. This directive bans the placing on the EU market of new electrical and electronic equipment containing more than agreed levels of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants.



[AFFIX RECEIPT OR PROOF
OF PURCHASE HERE]

GUARANTEE

For your convenience, you are not required to complete a form and return it to us in order to validate your guarantee. However, please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document. **We recommend that you attach your receipt to this documentation.**

Your product carries a minimum 12 month guarantee from the date that the original purchaser receives it. If your product fails to operate to its specification due to faulty workmanship or materials during the guarantee period, we will either repair or replace the product. We will use our discretion to determine as to whether a repair is offered or replacement provided. The product will not be covered by the guarantee if it has been misused, transformed, modified or altered in any way.

If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof of purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed. For full details of your product you should refer to the instruction manual which accompanies this product. You are strongly advised to read this manual carefully in its entirety and to retain it for future reference.

This product guarantee does not affect your statutory rights.



www.firedupcorporation.com

Fired Up Corporation Ltd.
Fired Up Buildings
St Thomas Road
Huddersfield
HD1 3LF
United Kingdom