

CORBY

HAIR DRYER

This manual is for the following models:Kendal
HDY0001
3004Dalton
HDY0002
3009Chester
HDY0006
CH-500Bedford
HDY0009
CH-605Linton
HDY0011
RCY-67250Stratus
HDY0012
HD-502Linton
HDY0013
1808-10www.corbyofwindsor.comwww.firedupcorporation.com/manual

These instructions must be read before use

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage. These instructions are also available on our website.

CONTENTS

SECTION 01

Important safety instructions	03-04
Important	05

SECTION 02

Introduction	06
Identification	07-11
Parts supplied	07-11
Installation	09-12

SECTION 03

Use	13
Care	13
Plug Replacement	14-15
Guarantee	16

IMPORTANT SAFETY INSTRUCTIONS

DO'S

- Ensure your mains supply rating corresponds with that stated on the rating label fixed to the appliance before making any connections.

- Check the product and the supply cord for damage regularly.

- Check that the voltage rating of this appliance matches that of your supply.

- Only use this appliance for its intended use as described in this manual.

- Always disconnect the appliance from the electrical supply after use and before carrying out cleaning or maintenance.

- Keep the appliance out of reach from children, particularly during use and cool down.

- Always unplug the hair dryer after use.

- Always place the appliance with the stand, if any, on a heat-resistant, stable, flat surface.

- Keep the supply cord away from heated surfaces.

- Close supervision is necessary when the appliance is used by, on, or near children.

- Attachments may get hot in use. Use care when handling them.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid any hazards.

- The hair dryer must be fixed out of reach of a person taking a bath or shower.

- The appliance must be fixed so that the hand-held part, when fully extended, is out of reach of a person taking a bath or shower.

DON'TS

- **WARNING** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



-
- Do not use the product outdoors or in the presence of aerosols.
-
- Never cover the air intake grille at the rear of the hairdryer, or place it on a soft surface where the air intake may be covered. Keep air intake free of dust and hair etc.
-
- Do not insert any objects into the air intake grille.
-
- Never use the appliance with wet hands and keep away from sources of water.
-
- Never use the product if the supply cord or plug is damaged or if the appliance has been dropped into water. Return the appliance to a service centre for examination and repair.
-
- Do not use or store the hair dryer where it can come into contact with water.
-
- This hair dryer should never be left unattended when plugged in.
-
- Do not pull or wrap the supply cord around the hairdryer.
-
- Do not direct the hot air towards the eyes or other sensitive areas.
-
- If the appliance falls into water, UNPLUG IT IMMEDIATELY. Do not reach into the water until the power has been disconnected.
-
- Do not use attachments not recommended by the manufacturer.
-
- Do not put the hair dryer down while operating.
-

IMPORTANT!

This appliance is not to be used by persons, including children, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children being supervised are not to play with the appliance.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.

Cleaning and user maintenance shall not be made by children without supervision.

Check the appliance and the supply cord for damage regularly. If the supply cord becomes damaged, it must be replaced by the manufacturer, its service agent or a suitably qualified person using the same rated cable in order to avoid any hazards. Do not attempt to make repairs to the appliance yourself, always contact a qualified technician.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

The hair dryer is fitted with an automatic overheating protection device. In the event of the unit overheating the hair dryer will switch off. Unplug the unit from the mains and allow to cool. The hair dryer can be used again once cooled, but first check the air intake grilles to make sure they are not obstructed by fluff, hair, etc.

In keeping with other manufacturer's of domestic appliances, we recommend that when not in use the product should be switched off at the mains supply only.

-
- When wall mounting the product, always check that there are no water, gas or electrical cables/pipes within or behind the walls.
-
- Ensure the mains supply is switched off before commencing any electrical installation.
-
- The electrical installation should be carried out in accordance with current wiring regulations. If in doubt on any part, please seek advice from a qualified electrician.
-
- Some hair dryers are double insulated and does not require an Earth (ground) connection.
-
- Connection of the unit to the electrical supply by fixed wiring should be made with cable suitable for a 13A loading.
-
- When the unit is to be permanently connected to the fixed wiring, a suitable means for all-pole disconnection (contact separation of at least 3mm) should be incorporated (e.g. a switched fuse spur fitted with a 13A rated fuse).
-

 
SAVE THESE INSTRUCTIONS

INTRODUCTION

Thank you for choosing this hair dryer. This product is designed to meet the most stringent quality, performance, and safety requirements. This guide aims to improve your understanding of your new hair dryer by providing simple and informative instructions.

FREESTANDING HAIR DRYERS IDENTIFICATION


Stratus / HDY0012 / HD-502 - 1800W

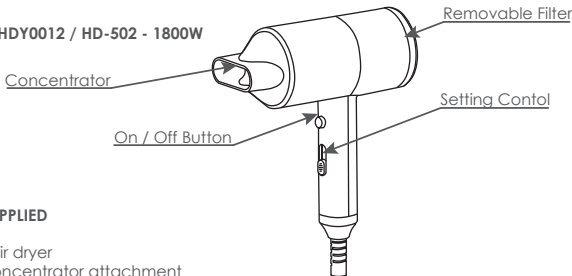

PARTS SUPPLIED

- 1x Hair dryer
- 1x Concentrator attachment

 
Chester / HDY0006 / CH-500 - 1800W

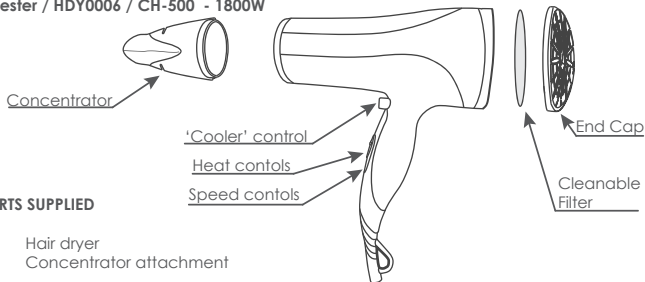

PARTS SUPPLIED

- 1x Hair dryer
- 1x Concentrator attachment

 
Bedford / HDY0009 / CH-605 - 2000W

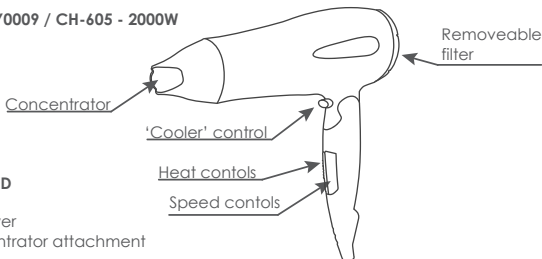

PARTS SUPPLIED


- 1x Hair dryer
- 1x Concentrator attachment

 Linton / HDY0013 / 1808-10 - 1200W

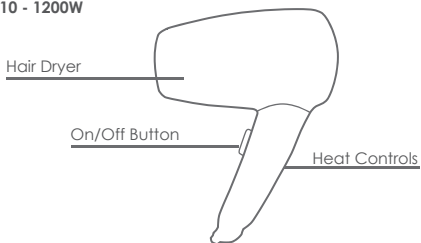
**PARTS SUPPLIED**

1x Hair dryer

 Dalton / HDY0002 / 3009- 1600W

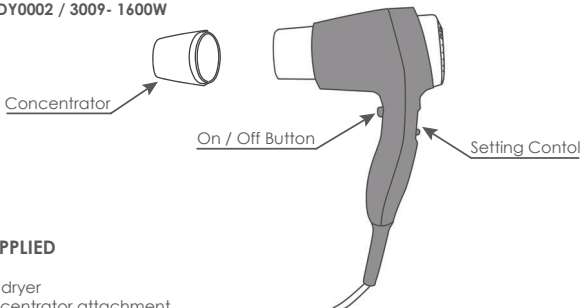**PARTS SUPPLIED**

 1x Hair dryer
 1x Concentrator attachment

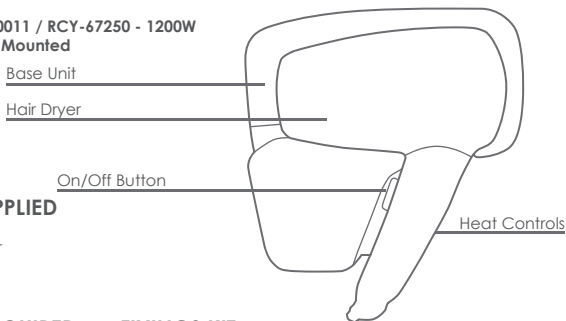WALL MOUNTED HAIR DRYERSLinton / HDY0011 / RCY-67250 - 1200W
Wall/Drawer Mounted**PARTS SUPPLIED**

1x Hair dryer
 1x Base Unit

TOOLS REQUIRED

 
- Electric drill
- 6mm masonry bit
- Cross-head drill bit

FIXINGS KIT

- 1x Large screw 2x Small screw 2x Wall plug
 1x Screw Cap 1x Plate


INSTALLATION (WALL-MOUNTED)

1.




Mark the wall with a pencil to indicate the location of the bracket.

 2.

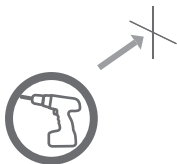


Use a drill and 6mm masonry bit to drill a hole on the marked point.

 3.

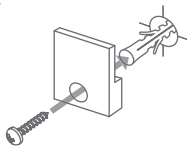


Insert a wall plug into the hole and secure the bracket as shown using a small screw.

 4.

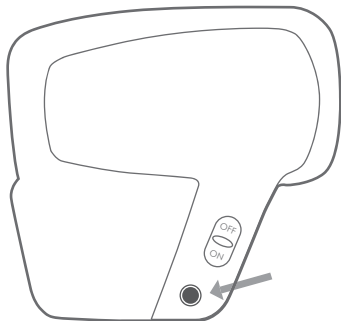


Hang the base unit on the bracket. Align the product with a spirit level and mark with a pencil through the bottom hole.

 5.

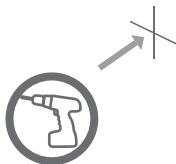

Unhook the base unit and drill into the wall at the marked point.

 6.



Insert a wall plug into the hole.

 
7.

Re-hang the base unit and screw the large screw into the hole. Cover the screw hole with the screw cap.



INSTALLATION (WITH RESERVED WIRE)

1.

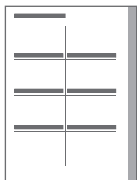

Follow 'WALL MOUNTED' instructions numbers 1 to 6.

 
2.

Open




To remove the cover, first remove the hand piece and unscrew the 4 screws from the cover.

Back of hair dryer holder

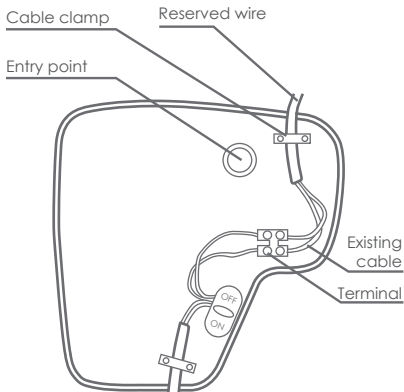

 3.



Unscrew the cable clamp.

4.



Drill a hole where the cable needs to enter the cable entry point.

5.

 
Pull the reserved wire through the entry hole and connect to the terminal. Ensure there is enough cable to allow the base unit to be un-hooked and unclipped from the rear should access to the connections be required in the future.

6.

Screw the front cover back into place and cover the screw hole with the screw cover.



Kendal / HDY0001 / 3004 - 1600W - Wall/Drawer Mounted

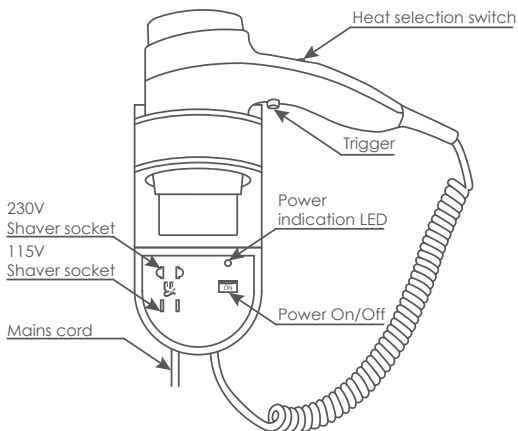**TOOLS REQUIRED**

- Crosshead screw driver
- Electric drill
- 6mm masonry bit
- Pencil
- Spirit level

PARTS SUPPLIED

- 1x Hair dryer
- 1x Base unit

FIXINGS SUPPLIED

- 4x Wall plug
- 4x Screw

INSTALLATION

IMPORTANT MOUNTING INSTRUCTIONS

1. When wall mounting the product, always check that there are no water, gas or electrical cables/pipes within or behind the wall.
2. Ensure the mains supply is switched off before commencing any electrical installation.
3. The electrical installation should be carried out in accordance with current wiring regulations. If in doubt on any part, please seek advice from a qualified electrician.
4. Ensure your mains supply rating corresponds with that stated on the rating label fixed to the hair dryer.
5. The hair dryer is double insulated and does not require an Earth (ground) connection.
6. The hair dryer must be fixed so that the base unit and the hand held part, when fully extended, is out of reach of a person taking a bath or shower.
7. Connection of the unit to the electrical supply by fixed wiring should be made with cable suitable for a 13A loading.
8. When the unit is to be permanently connected to the fixed wiring, a suitable means for all-pole disconnection (contact separation of at least 3mm) should be incorporated (e.g. a switched fuse spur fitted with a 13A rated fuse)

WALL MOUNTED (external cable routing)

1. Remove the screw located at the bottom of the holder as shown in Fig. 1, then remove the cover.
2. Offer the holder to the wall and mark the wall with a pencil through the fixing points shown in Fig. 2.

 
 
Note: Use a spirit level to ensure the holder is installed accurately.

Note: If fitting the product to plaster board with a cavity behind then propriety wall fixings (not supplied) will be required.

3. Using an electric drill and a 6mm masonry bit, drill holes at the marked points.
4. Insert wall plugs.
5. Align the holder to the holes and screw into position.
6. Replace the cover.
7. Fit plug or connect to a fixed fused spur.

WALL MOUNTING (internal reserved wire cable routing)

1. Follow the points 1 - 5.
2. Route the mains cord through one of the two entry points (Fig. 2) and connect to the terminals.

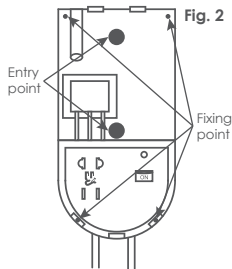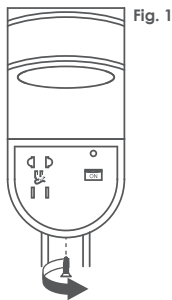

USE

SETTINGS

The air flow and temperature can be adjusted using the switches located on the handle of the hair dryer.

Heat Setting	
C	Cooler Blow (not applicable to all models)
1/Min	Normal Heat
2/Max	High Heat

- (1) Use heat setting 1/Min for gentle drying and styling.
- (2) Use heat setting 2/Max for fast drying or pre-drying.
- (3) After drying hair, use heat setting C, if available, to set style with a continuous flow of cooler air.

IMPORTANT

If the appliance overheats, it will switch off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not obstructed by fluff, hair, etc.

DRYING

1. Put the plug in the wall socket (if required).
2. Select the desired heat using the control on the handle.
3. Switch the appliance on by holding the on/off button, or using the speed control on the handle.
4. Dry your hair by making brushing movements while holding the dryer at a short distance from your hair.

ATTACHMENTS

Some models are supplied with attachments.

Concentrator - the concentrator attachment enables the directing of airflow to a more specific area of hair. Connect the concentrator by simply clicking it onto the appliance. Disconnect it by pulling it off.

Do not use attachments not recommended by the manufacturer.

STORAGE

Allow the hair dryer to cool after use and store in a dry location. Never wrap the power cord around the hair dryer.

CARE

When cleaning, or storing away, always pull out the plug from the socket outlet. Never yank the cord to disconnect from the outlet, instead grasp the plug and pull to disconnect.

This appliance should be cleaned with a dry cloth. Remove the concentrator from the hair dryer before cleaning. Never rinse the appliance with water.

SPECIFICATION

Model No	Rated Voltage	Rated Frequency	Rated Power											
Kendal HDY0001 / 3004	220-240V	50-60Hz	1600W											
Dalton HDY0002 / 3009	220-240V	50-60Hz	1600W											
Chester HDY0006 / CH-500	220-240V	50-60Hz	1600-1800W											
Bedford HDY0009 / CH-605	220-240V	50-60Hz </tr <tr> <td>Linton HDY0011 / RCY-67250</td> <td>220-240V</td> <td>50-60Hz</td> <td>1200W</td> </tr> <tr> <td>Stratus HDY0012 / HD-502</td> <td>220-240V</td> <td>50-60Hz</td> <td>1400-1800W</td> </tr> <tr> <td>Linton HDY0013 / 1808-10</td> <td>220-240V</td> <td>50-60Hz</td> <td>1200W</td> </tr>	Linton HDY0011 / RCY-67250	220-240V	50-60Hz	1200W	Stratus HDY0012 / HD-502	220-240V	50-60Hz	1400-1800W	Linton HDY0013 / 1808-10	220-240V	50-60Hz	1200W
Linton HDY0011 / RCY-67250	220-240V	50-60Hz	1200W											
Stratus HDY0012 / HD-502	220-240V	50-60Hz	1400-1800W											
Linton HDY0013 / 1808-10	220-240V	50-60Hz	1200W											

Kendal / HDY0001 / 3004

Shaver Socket: 0.05A / 230V & 0.1A / 115V

 
PLUG REPLACEMENT (for product fitted with BS plug)

This appliance is supplied with a BS1363 3 pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at **13 Amp** and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:


The wires in the supply cord on this appliance are coloured in accordance with the following code:

- Green and Yellow - Earth
- Blue - Neutral
- Brown - Live

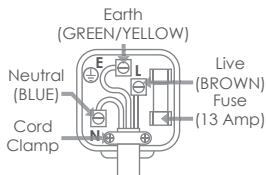

THIS APPLIANCE MUST BE EARTHED

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.

- The green and yellow earth wire must be connected to the terminal in the plug which is marked with the letter E or with the earth symbol 
- The blue wire must be connected to the terminal marked N
- The brown wire must be connected to the terminal marked L

IMPORTANT - any cut off plug should be disposed of safely to prevent hazard. There is a danger of electric shock if a cut off plug is inserted into a socket outlet.


CONFORMITY WITH DIRECTIVES

Conforms with relevant European Directives

ENVIRONMENTAL PROTECTION

- (WEEE) Waste Electrical and Electronic Equipment

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Correct Disposal of This Product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from controlled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>



AFFIX RECEIPT OR PROOF
OF PURCHASE HERE

GUARANTEE

For your convenience, you are not required to complete a form and return it to us in order to validate your guarantee. However, please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document. **We recommend that you attach your receipt to this documentation.**

Your product carries a minimum 12 month guarantee from the date that the original purchaser receives it. If your product fails to operate to its specification due to faulty workmanship or materials during the guarantee period, we will either repair or replace the product. We will use our discretion to determine as to whether a repair is offered or replacement provided. The product will not be covered by the guarantee if it has been misused, transformed, modified or altered in any way.

If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof of purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed. For full details of your product you should refer to the instruction manual which accompanies this product. You are strongly advised to read this manual carefully in its entirety and to retain it for future reference.

This product guarantee does not affect your statutory rights.



www.firedupcorporation.com

Fired Up Corporation Ltd
Fired Up Buildings
HD1 3LF, UK

Fired Up Corporation
(Ireland) Ltd
71, D02 P593, Dublin